


NOTE: WHEN FASTENING THE WESTEMP INSULATION PANEL, **DO NOT OVER TIGHTEN THE SCREWS.** A SLIGHT MOVEMENT OF THE PLATE WASHER UNDER THE SCREW HEAD IS DESIRABLE.

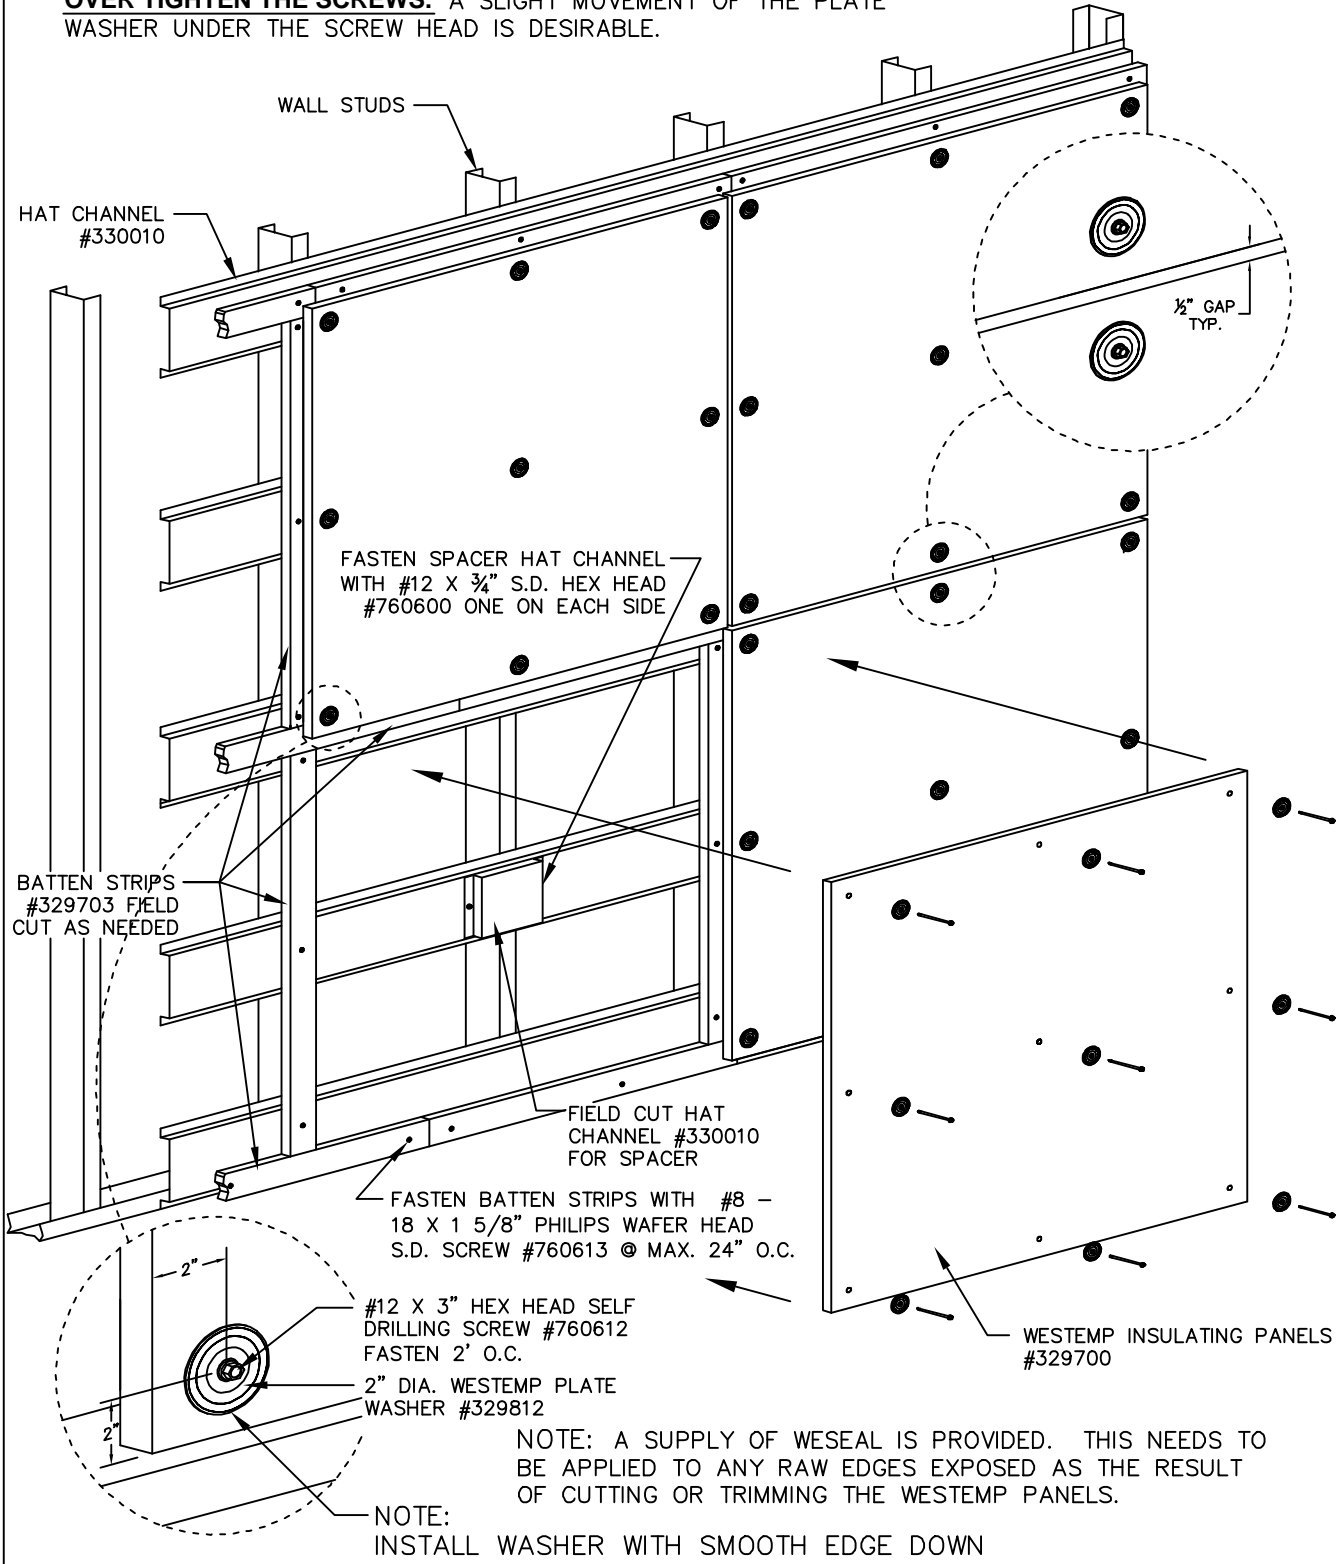

NOTE: A SUPPLY OF WESEAL IS PROVIDED. THIS NEEDS TO BE APPLIED TO ANY RAW EDGES EXPOSED AS THE RESULT OF CUTTING OR TRIMMING THE WESTEMP PANELS.

NOTE: INSTALL WASHER WITH SMOOTH EDGE DOWN

Date: JANUARY 29, 2003	Sheet Title:	 <p>FIRE FACILITIES INC.          350 BUSINESS PARK DRIVE, SUN PRAIRIE, WI 53590          OFFICE: (608) 827-4110 FAX (608) 834-1843          TOLL FREE (800) 929-3726 TOLL FREE FAX (800) 639-7012</p>	<p>THIS DRAWING AND ALL PARTS THEREOF IS THE EXCLUSIVE PROPERTY OF FIRE FACILITIES, INC. 350 BUSINESS PARK DRIVE, SUN PRAIRIE, WI 53590 TOLL FREE (800) 929-3726 TOLL FREE FAX. (866) 639-7012 AND MAY NOT BE REPRODUCED IN WHOLE OR PART WITH OUT WRITTEN PERMISSION.</p>	<table border="1"> <thead> <tr> <th>REVISIONS</th> <th>by</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>	REVISIONS	by																		
REVISIONS	by																							
Drawn by: KH	TYPICAL WESTEMP LAYOUT INSTALLATION OF "WESTEMP"																							
FILE: FFW.DWG																								
Scale: 1:20																								
Order No.																								



