NOTE: WHEN FASTENING THE WESTEMP INSULATION PANEL, **DO NOT OVER TIGHTEN THE SCREWS.** A SLIGHT MOVEMENT OF THE PLATE WASHER UNDER THE SCREW HEAD IS DESIRABLE.

NOTE: WHEN DRILLING HOLES IN CONCRETE FOR TOPCONS USE 3/16" DRILLING BIT

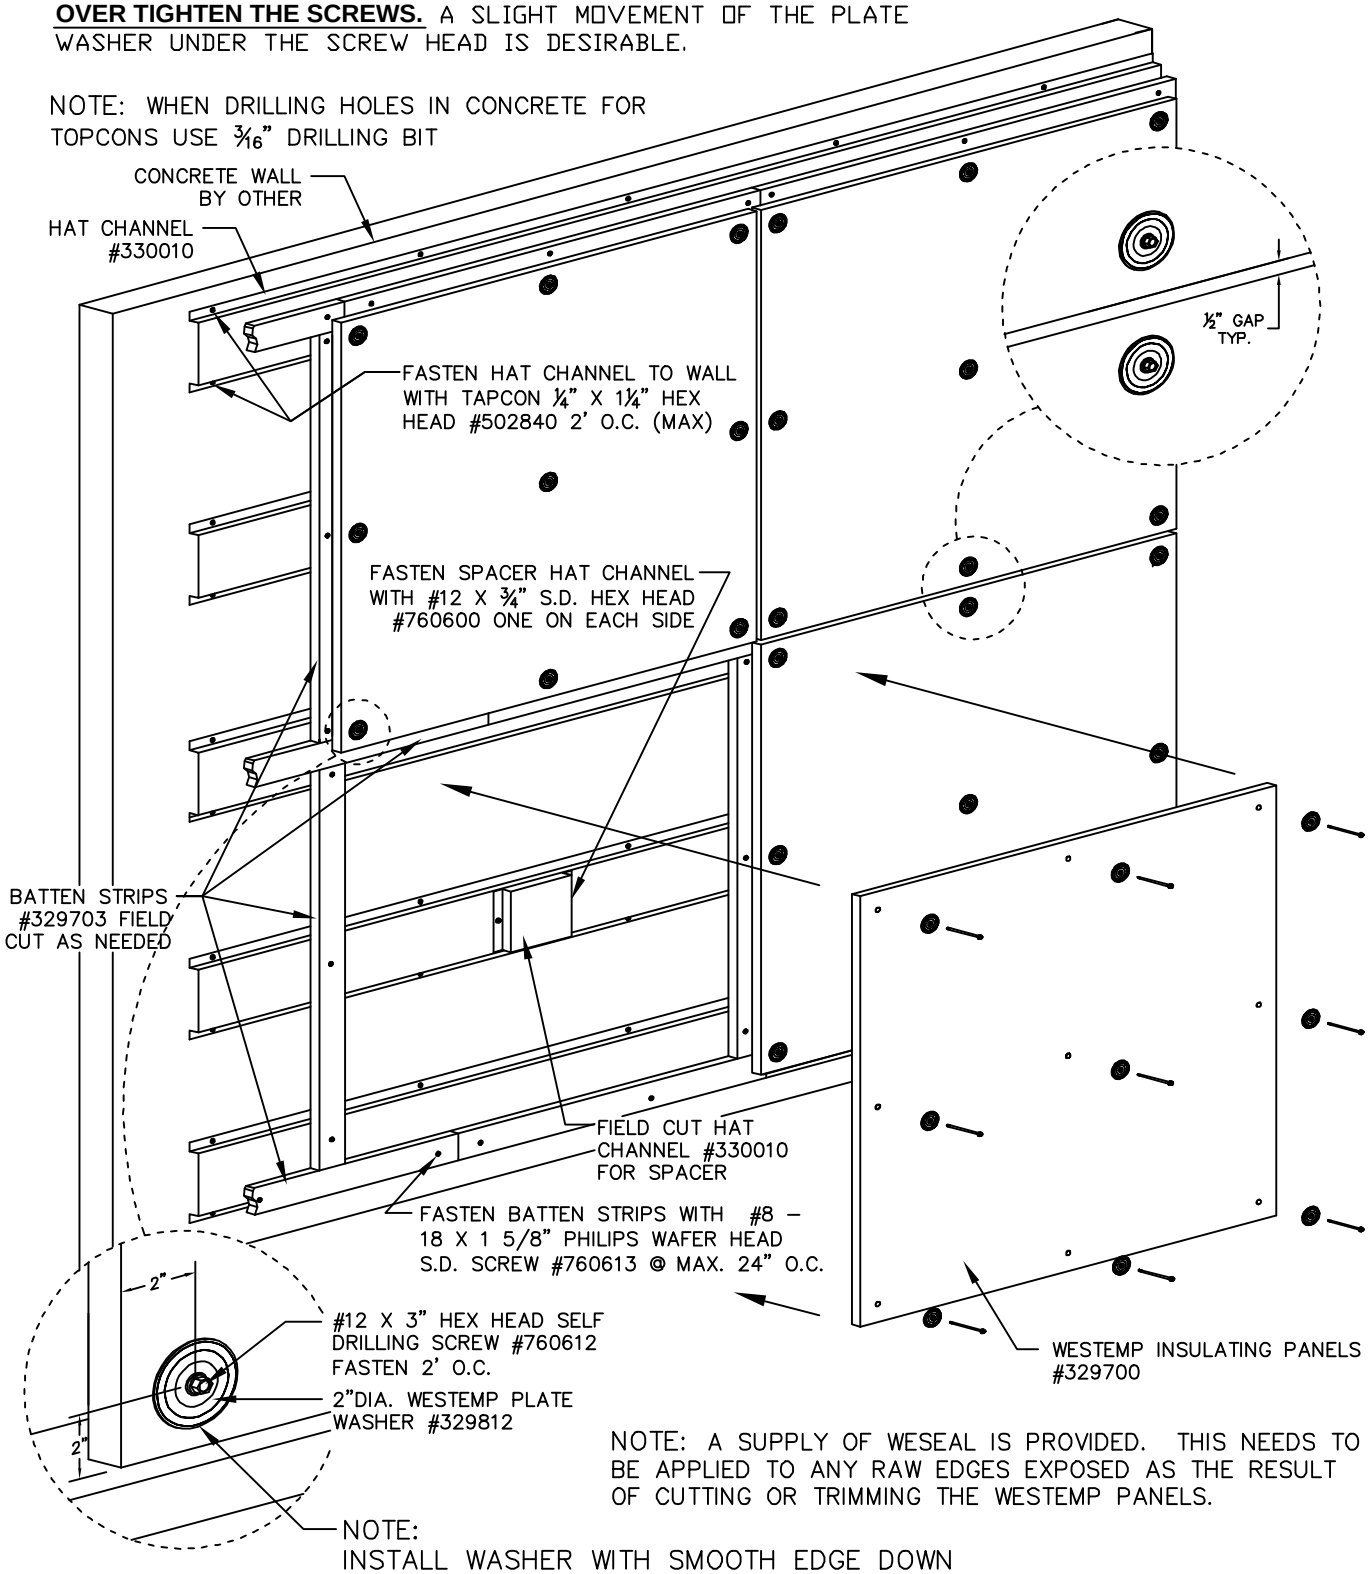

NOTE: A SUPPLY OF WESEAL IS PROVIDED. THIS NEEDS TO BE APPLIED TO ANY RAW EDGES EXPOSED AS THE RESULT OF CUTTING OR TRIMMING THE WESTEMP PANELS.

Date: JANUARY 29, 2003 Drawn by: KH FILE: CONCRETE FFIW.DWG Scale: 1:20 Order No. FTE-84/25035	Sheet Title: TYPICAL WESTEMP LAYOUT INSTALLATION OF "WESTEMP"	FIRE FACILITIES INC. 350 BUSINESS PARK DRIVE, SUN PRAIRIE, WI 53590 OFFICE: (608) 827-4110 FAX (608) 834-1843 TOLL FREE (800) 929-3726 TOLL FREE FAX (866) 639-7012	THIS DRAWING AND ALL PARTS THEREOF IS THE EXCLUSIVE PROPERTY OF FIRE FACILITIES, INC. 350 BUSINESS PARK DRIVE, SUN PRAIRIE, WI 53590 TOLL FREE (800) 929-3726 TOLL FREE FAX. (866) 639-7012 AND MAY NOT BE REPRODUCED IN WHOLE OR PART WITH OUT WRITTEN PERMISSION.	REVISIONS / by